



ER and NER Electric Hoist Recommended Spare Parts 1/8 to 5 Ton

Part Name	Parts Per Hoist	Hoist Capacity Code																	
		001H	003S	005L	003H	005S	010L	010M	010S	015S	020L	020M	030C	020S	025S	030L	030S	050L	
Brake Drum Assembly	S 1	ER1BS5212	ER1DS5212																
	D 1	ER1BS5212	ER1DB5212																
Brake Spring	S 1	ES214003	ER1CS5212	ER1CE-9214															
	D 1	ER1BB9214	ES214005S	ER1CB9214	ER1DB9214											ES214D015	ER1FB-9214	ES214D015	
Nut	1	ES217005S																	
Lock Washer	1	ES218005S																	
Bottom Hook Complete Set	1	ER1BH-1011	ER1BS-1011	ER1CS-1011	ER1CH-1011	ER1CS-1011	ER1DS1011	ER1DM-1011	ER1ES1011	ER1DR-1011	ER1ES-1011	ER1ES-1011	ER1EM-1011	ER1FS1011	ER1FR-1011				
Cushion Rubber	U (x)	ER1BS9053 (2)	ER1CS9053 (2)	ER1DS9053 (2)															
	U, S (x)	ER1DL9051 (1)																	
Chain Spring	U, D (x)	ES047-015 (1)																	
	U/L, S (x)	ES047D003 (2)	ES047A005 (2)	ER1DS9051 (2)	ER1DL9051 (2)	ES047-015 (2)	ER1DS9051 (2)	ER1DS-9051 (2)	ER1DL-9051 (2)	ES047-015 (2)	ER1DL9051 (2)	ES047-015 (2)	ER1FS9051 (2)	ER1EM-9051 (3)					
Electromagnetic Contactor	1	MGC22306A																	
Electromagnetic Contactor - High Speed	D 1	MGC11226A																	
Electromagnetic Contactor - Low Speed	D 1	MGC12226A																	
Fuse	S 1	9006271															9006272		
- Trans. Secondary = 110V	D 1	9006271	9006271											9006272	9006273	9006272			

In the column "Parts Per Hoist" a designator is used for parts that apply only to a particular model or option. The designators are:

- S = Single Speed
- D = Dual Speed
- U = Upper Limit Switch only (standard)
- U/L = Upper/Lower Limit Switch (optional)